



4 Rue Andrée Marie  
Ampère,  
22300 Lannion  
02 22 66 67 29  
support@copeeks.fr  
copeeks.fr

# INSTALLATION GUIDE

# PEEK *Analytics*

Requirement



For optimal operation of the box, please follow the installation order.

20 min.



To see a video tutorial of this installation, scan this QR Code:



Step 1




Fix the box to a solid surface.

Step 2



On each side, tighten the mounting bracket screws.

Step 3

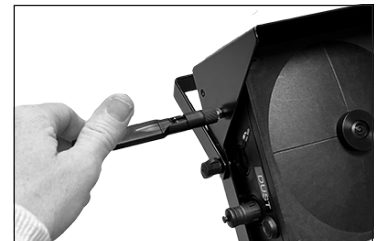

Screw the antenna on the left side.

## WARNING !

To be inserted, the white direction indicators on the tips of the sensors must be aligned. (WARNING: DO NOT SCREW!)



### Step 4



In the «GAS» slot, insert the blue connector (under the casing, on the right side).



Then connect the other part of the connector to the sensor.

### T°/HR% Option



Install the wireless “humidity/temperature” sensor outdoors (ideally sheltered).



To protect the sensor, angle the sensor’s base downwards.

### DUST Option



In the «DUST» slot, insert the green connection (on the left side).



Then connect the other part of the connector to the sensor.

### LUX Option



In the «LUX» slot, insert the black connection (on the right side).




Direct the sensor’s top towards a light source.

### Step 5



In the «POWER» slot, insert the red connection (under the case, on the left side).

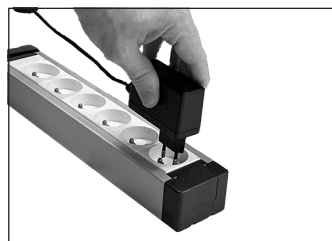

Then plug in the other end of the red wire into an outlet.

### Step 6



Hold the button on the left side for 2 seconds to turn on the box (check the presence of the green light).

### Advices

Check that sensors or cables are not accessible to animals.

Login to: <https://app.copeeks.io> with your identifiers received by e-mail.

Consult the photos in the “media” section.

**The box is now functional.**